

SE 605 H Memosens Conductivity Sensor

Robust 2-electrode sensor, for precise and reliable measurement of low and very low conductivities, particularly in ultrapure water, digital, with Memosens technology

Robust sensor with hygienic design made of stainless steel in coaxial arrangement. Large measuring range from ultrapure water to 1000 $\mu\text{S}/\text{cm}$. Integrated temperature detector for temperature compensation. Easy to clean thanks to replaceable outer and inner electrode.

Applications

Ultrapure water, WFI (water for injection), pharmaceutical and food industry, biotechnology

Facts and Features

- Perfect galvanic isolation thanks to Memosens technology
- Digital data transfer
- Integrated sensor diagnostics

- Large measuring range from ultrapure water to 1000 $\mu\text{S}/\text{cm}$
- Hygienic design
- Electropolished – Roughness $R_a \leq 0.4$ or $\leq 0.8 \mu\text{m}$
- FDA-certified materials
- Coaxially arranged electrodes
- Independent of installation conditions
- Integrated temperature detector
- High level of process safety due to durable materials and robust design
- Easy to clean thanks to replaceable outer and inner electrode
- Particularly suitable for monitoring ultrapure water in power plants
- Replaceable gaskets


Specifications

Cell constant:	0.021/cm
Measuring range:	0 ... 1000 $\mu\text{S}/\text{cm}$
Measurement error:	0 ... 600 $\mu\text{S}/\text{cm} \pm 2 \%$ 600 ... 1000 $\mu\text{S}/\text{cm} \pm 4 \%$
Wetted materials:	1.4435 stainless steel; insulator: PEEK; gaskets: See product range
Temperature detector:	NTC 30 k Ω
Temperature:	Medium: $-20 \dots 135^\circ\text{C}$ Environment: $-25 \dots 80^\circ\text{C}$
Pressure, Ingot:	Max. 25 bar ($-20 \dots 70^\circ\text{C}$); max. 10 bar (135°C)
Pressure, Clamp:	Max. 16 bar ($-10 \dots 110^\circ\text{C}$); max. 10 bar (135°C)
Process connection:	See product range
Sensor connector:	Memosens
ATEX marking:	II 1 G Ex ia IIC T3/T4/T6 Ga
FM marking:	IS for Class I, Division 1, Groups A, B, C, D; Class I, Zone 0, AEx/Ex ia IIC T6 ... T4 NIFW for Class I, Division 2, Groups A, B, C, D; Class I, Zone 2, IIC T6 ... T4


SE 605 H Memosens Conductivity Sensor

Dimension Drawing

Ingold socket process connection, groove position 29 mm (Type H0)

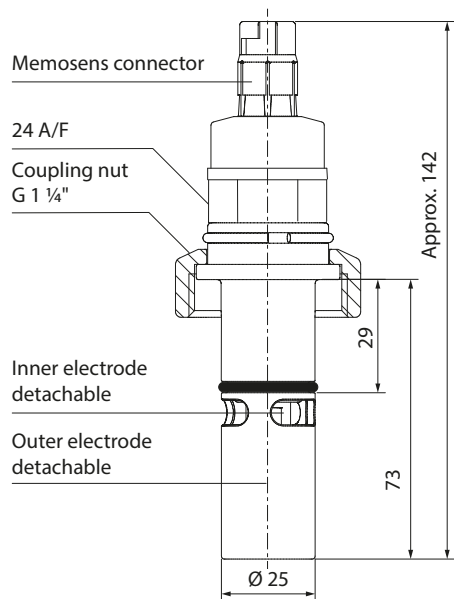


Ingold socket process connection, groove position 45 mm (Type HZ)

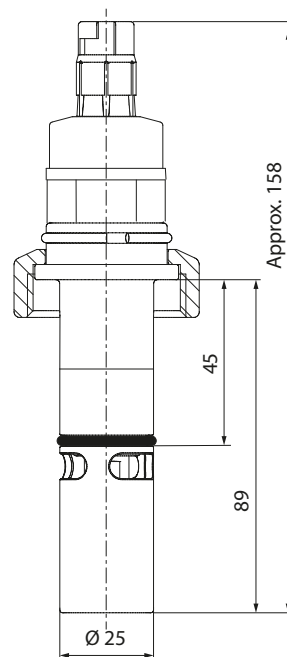

Weld-in socket, straight

With HSD (handling safety design)
safety function


ZU 0922

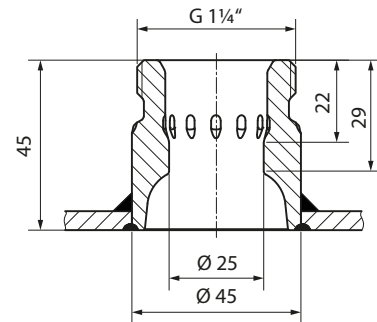


Weld-in socket inclined, 15°

With HSD (handling safety design)
safety function

ZU 0923

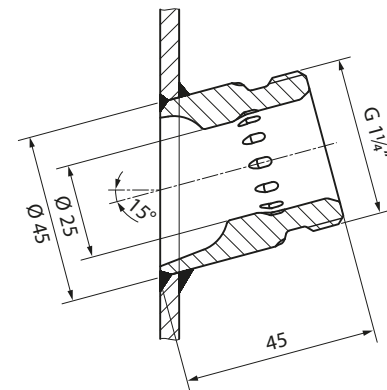

Process connection clamp Type J1

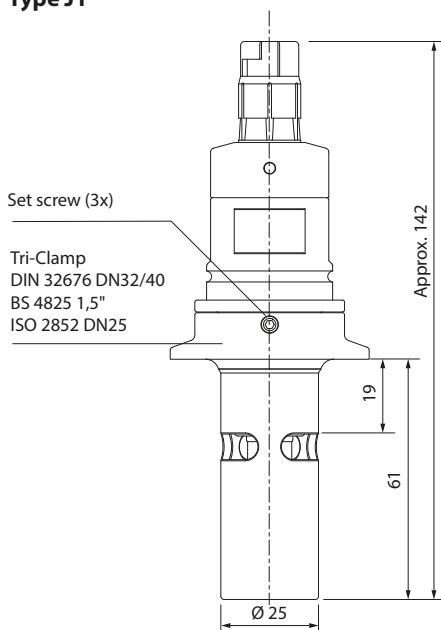


Note: The weld-in sockets listed above are only suitable for sensors with design version H0. For additional weld-in sockets, see accessories.

All dimensions in mm.

Pressure/Temperature Diagram

Pressure [bar]

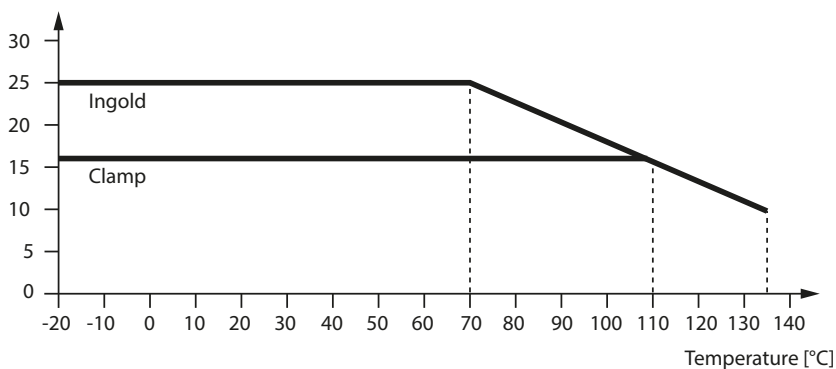

Product Range

		Order No.									
		SE 605H -									
Explosion protection	Without ATEX	N	X								
Sensor connector	Memosens	MS									
Process connection	Ingold socket, 25 mm (G 1 ¼"), 29-mm groove	H	0								
	Ingold socket, 25 mm (G 1 ¼"), 45-mm groove	H	Z								
	Clamp 1 ½"	J	1								
Gasket material	FKM FDA					F					
	EPDM FDA					E					
	FFKM FDA					H					
	FKM FDA USP VI					V					
	EPDM FDA USP VI					U					
	FFKM FDA USP VI					W					
Certificates	Without										0
	Inspection Certificate 3.1 according to EN 10204										3
	FDA - USP VI										U
	FDA										F
	Surface Ra ≤ 0.4 µm										4
	Surface Ra ≤ 0.8 µm										8

SE 605 H Memosens Conductivity Sensor

Accessories

				Order No.
Memosens cable	3 m			CA/MS-003NAA
	5 m			CA/MS-005NAA
	10 m			CA/MS-010NAA
	20 m*			CA/MS-020NAA
Memosens cable, Ex	3 m			CA/MS-003XAA
	5 m			CA/MS-005XAA
	10 m			CA/MS-010XAA
	20 m*			CA/MS-020XAA
Conductivity standard	KCl	300 ml	1.3 µS/cm	ZU 0701
	KCl	500 ml	15 µS/cm	CS-C15K/500
	KCl	500 ml	147 µS/cm	CS-C147K/500
Weld-in socket, straight, 40 mm	For tank wall			ZU 0717
	For pipe, DN 50			ZU 0717/DN50
	For pipe, DN 65			ZU 0717/DN65
	For pipe, DN 80			ZU 0717/DN80
	For pipe, DN 100			ZU 0717/DN100
Weld-in socket, beveled, 15 °, 40 mm	For tank wall			ZU 0718
	For pipe, DN 50			ZU 0718/DN50
	For pipe, DN 65			ZU 0718/DN65
	For pipe, DN 80			ZU 0718/DN80
	For pipe, DN 100			ZU 0718/DN100
Weld-in socket with HSD (handling safety design) safety function, straight	For tank wall			ZU 0922
	For pipe, DN 50			ZU 0922/DN50
	For pipe, DN 65			ZU 0922/DN65
	For pipe, DN 80			ZU 0922/DN80
	For pipe, DN 100			ZU 0922/DN100
Weld-in socket with HSD (handling safety design) safety function, beveled, 15°	For tank wall			ZU 0923
	For pipe, DN 50			ZU 0923/DN50
	For pipe, DN 65			ZU 0923/DN65
	For pipe, DN 80			ZU 0923/DN80
	For pipe, DN 100			ZU 0923/DN100
MemoSuite				Order No.
Management software for	Basic version (calibration)			SW-MS1400-B
Memosens Sensors	Advanced version (calibration, diagnostics, documentation)			SW-MS1400-A

* Greater lengths on request