

MEMO SENS



SE554 Memosens pH/ORP Sensor

Low-maintenance sensor for demanding process applications in the chemical industry, digital, with Memosens technology

The special design provides high accuracy, stability, speed, and a long life cycle. Through 2 open junctions, the reference system is in direct contact with the measured medium. There is hardly any risk of contamination or blocking of the junction. The high content and special distribution of potassium chloride in the polymer reduces measurement disturbances which could be caused by liquid junction potentials.


Applications

Measurement in media of extremely high ionic strength, salt brines, strongly oxidizing media, acidic and alkaline media.

Specifications

pH:	0 ... 14
ORP:	-1500 ... 1500 mV
Temperature:	0 ... 130 °C
Pressure, relative:	0 ... 10 bar
Temperature detector:	NTC 30 kΩ
pH sensor material:	Alpha glass
ORP sensor material:	Platinum
Reference system:	Ag/AgCl, polymer electrolyte
Junction:	Hole (2 x)
Length:	120 mm / 225 mm
Process adaptation:	PG 13.5
Sensor connector:	Memosens
ATEX marking	II 1 G Ex ia IIC T3 / T4 / T6 Ga
FM marking:	IS for Class I, Division 1, Groups A, B, C, D; Class I, Zone 0, AEx/Ex ia IIC T6 ... T4 NIFW for Class I, Division 2, Groups A, B, C, D; Class I, Zone 2, IIC T6 ... T4

Maßzeichnung

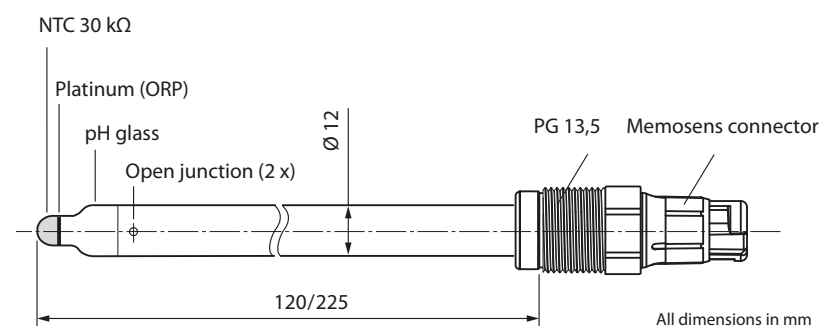

SE554 Memosens pH/ORP Sensor

Product line

Sensor	Length	Order No.
SE554 pH/ORP sensor	120 mm	SE554X/1-AMSN
	225 mm	SE554X/2-AMSN

Accessories

Accessories	Length	Order No.
Memosens cable	3 m	CA/MS-003NAA
	5 m	CA/MS-005NAA
	10 m	CA/MS-010NAA
	20 m*)	CA/MS-020NAA
Memosens cable, Ex	3 m	CA/MS-003XAA
	5 m	CA/MS-005XAA
	10 m	CA/MS-010XAA
	20 m*)	CA/MS-020XAA

CaliMat Buffer Solutions (20 °C)

CaliMat Buffer Solutions (20 °C)	Quantity	Order No.
pH value 2,00 ± 0,02	250 ml	CS-P0200/250
pH value 4,00 ± 0,02	250 ml	CS-P0400/250
	1000 ml	CS-P0400/1000
	3000 ml	CS-P0400/3000
pH value 7,00 ± 0,02	250 ml	CS-P0700/250
	1000 ml	CS-P0700/1000
	3000 ml	CS-P0700/3000
pH value 9,00 ± 0,02	250 ml	CS-P0900/250
	1000 ml	CS-P0900/1000
	3000 ml	CS-P0900/3000
pH value 12,00 ± 0,05	250 ml	CS-P1200/250
ORP buffer solution +220 mV	250 ml	ZU 0317

MemoSuite

MemoSuite		Order No.
Management software for	Basic version (calibration)	SW-MS1400-B
Memosens sensors	Advanced version (calibration, diagnostics, documentation)	SW-MS1400-A

*) Greater lengths on request